


LifeFitness

ARCTIC SILVER 90CW Upright Bike

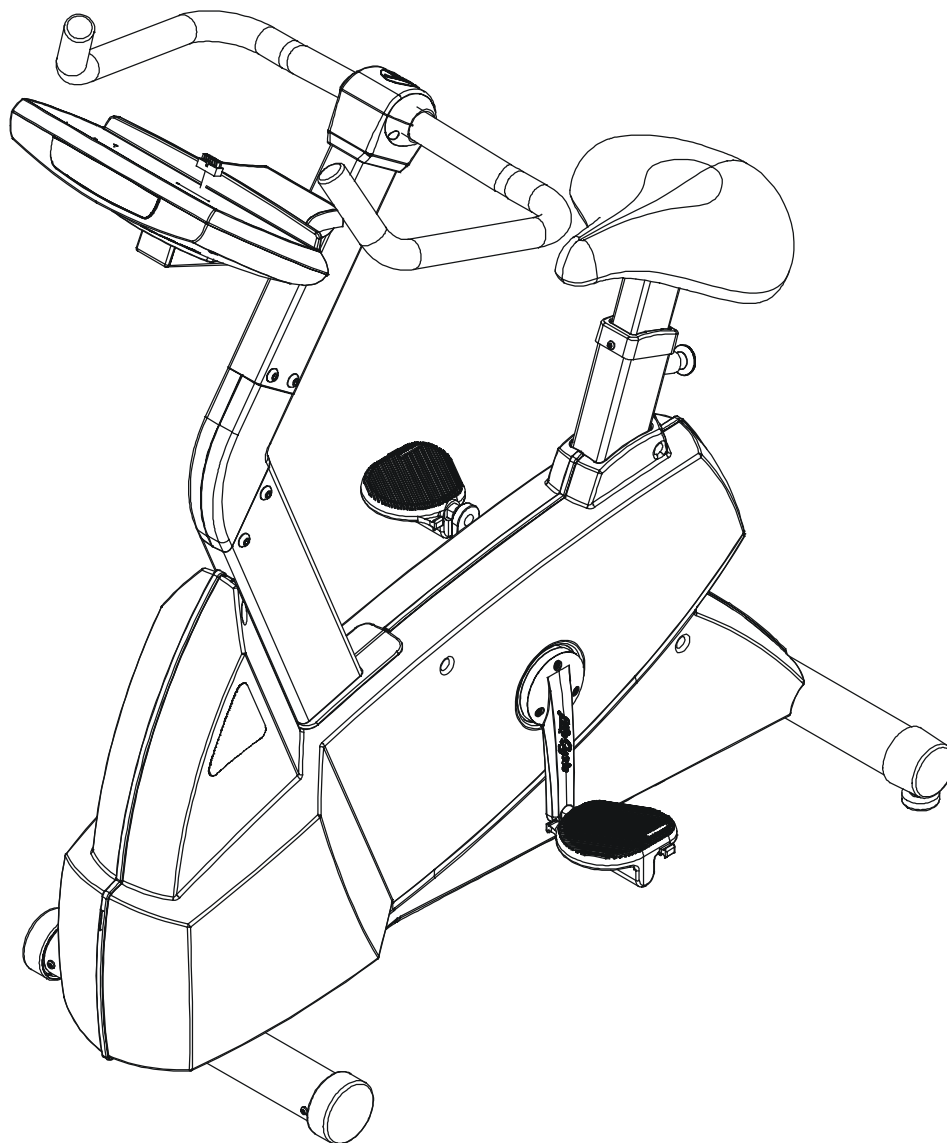

Customer Support Services
PARTS MANUAL

ARCTIC SILVER 90CW
REFERENCES

90CW-0XXX-02
S/N CCI100000 and UP


| | |
|--|--|
| OPERATION MANUAL | M051-00K63-A068 |
| ACCESSORY TRAY | GK63-00002-0004 |
| HARDWARE BAG | GK63-00002-0044 |
| POLAR UPGRADE KIT | GK63-00002-0002 |
| TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE .33 OZ PEN | 0017-00008-0204 0017-00008-0205 0017-00008-0206 |
| COAX CABLE | AK32-00020-0002 |
| ER READY BRACKET ASSEMBLY ASSEMBLY CONSISTS OF: 1) POWER CABLE 2) ER READY BRACKET 3) F TYPE CONNECTOR | AK63-00215-0000 AK32-00078-0001 0K63-01329-0000 0017-00021-2846 |
| SERVICE MANUAL | M051-00K63-A009 |

**NOTE: ADDING THE BOLT ON LCD SCREEN TO THE
90CW-0XXX-02 MAKES THE UNIT A 90CER-0XXX-02.**

ARCTIC SILVER 90CW
CONTENTS

90CW-0XXX-02
S/N CCI100000 and UP


| | Page |
|---|------|
| CONSOLE COMPONENTS | 4 |
| CONSOLE MOUNTING SCREWS AND POLAR COVERS..... | 5 |
| ALTERNATOR W/PULLEY | 6 |
| CRANKSHAFT AND BEARING ASSEMBLY | 7 |
| INTERMEDIATE SHAFT AND BEARING ASSEMBLY | 8 |
| SEAT LATCH ASSEMBLY | 9 |
| SEAT POST ASSEMBLY | 10 |
| SEAT POST SHROUDS..... | 11 |
| IDLER BRACKET ASSEMBLY..... | 12 |
| CONSOLE SUPPORT ASSEMBLY | 13 |
| LEFT SIDE SHROUD AND CRANKARM | 14 |
| RIGHT SIDE SHROUD AND CRANKARM..... | 15 |
| PCB MOUNTING BRACKET ASSEMBLY..... | 16 |
| FRONT WHEELS..... | 17 |
| RESISTOR ASSEMBLY | 18 |
| HANDLEBAR ASSEMBLY..... | 19 |
| BELTS..... | 20 |
| CABLES..... | 21 |

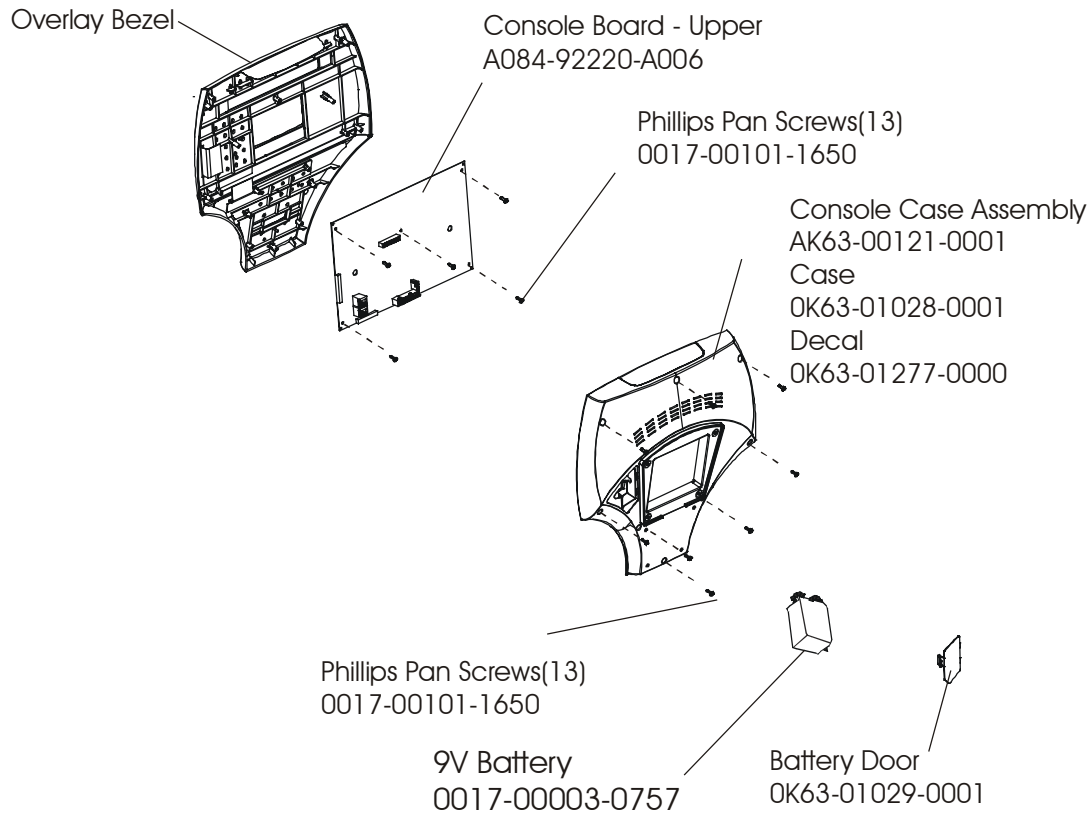

| Console Assembly | Bezel W/Overlay Assy. |
|-------------------------|-------------------------|
| AK63-00162-0001 Eng Met | AK63-00167-0001 Eng Met |
| AK63-00162-0003 Ger Met | AK63-00167-0003 Ger Met |
| AK63-00162-0004 Spn Met | AK63-00167-0004 Spn Met |
| AK63-00162-0006 Jap Met | AK63-00167-0006 Jap Met |
| AK63-00162-0007 Frn Met | AK63-00167-0007 Frn Met |
| AK63-00162-0008 Itl Met | AK63-00167-0008 Itl Met |
| AK63-00162-0009 Dut Met | AK63-00167-0009 Dut Met |
| AK63-00162-0010 Por Met | AK63-00167-0010 Por Met |

ARCTIC SILVER 90CW
Console Screws & Polar Covers

90CW-0XXX-02
S/N CCI100000 and UP

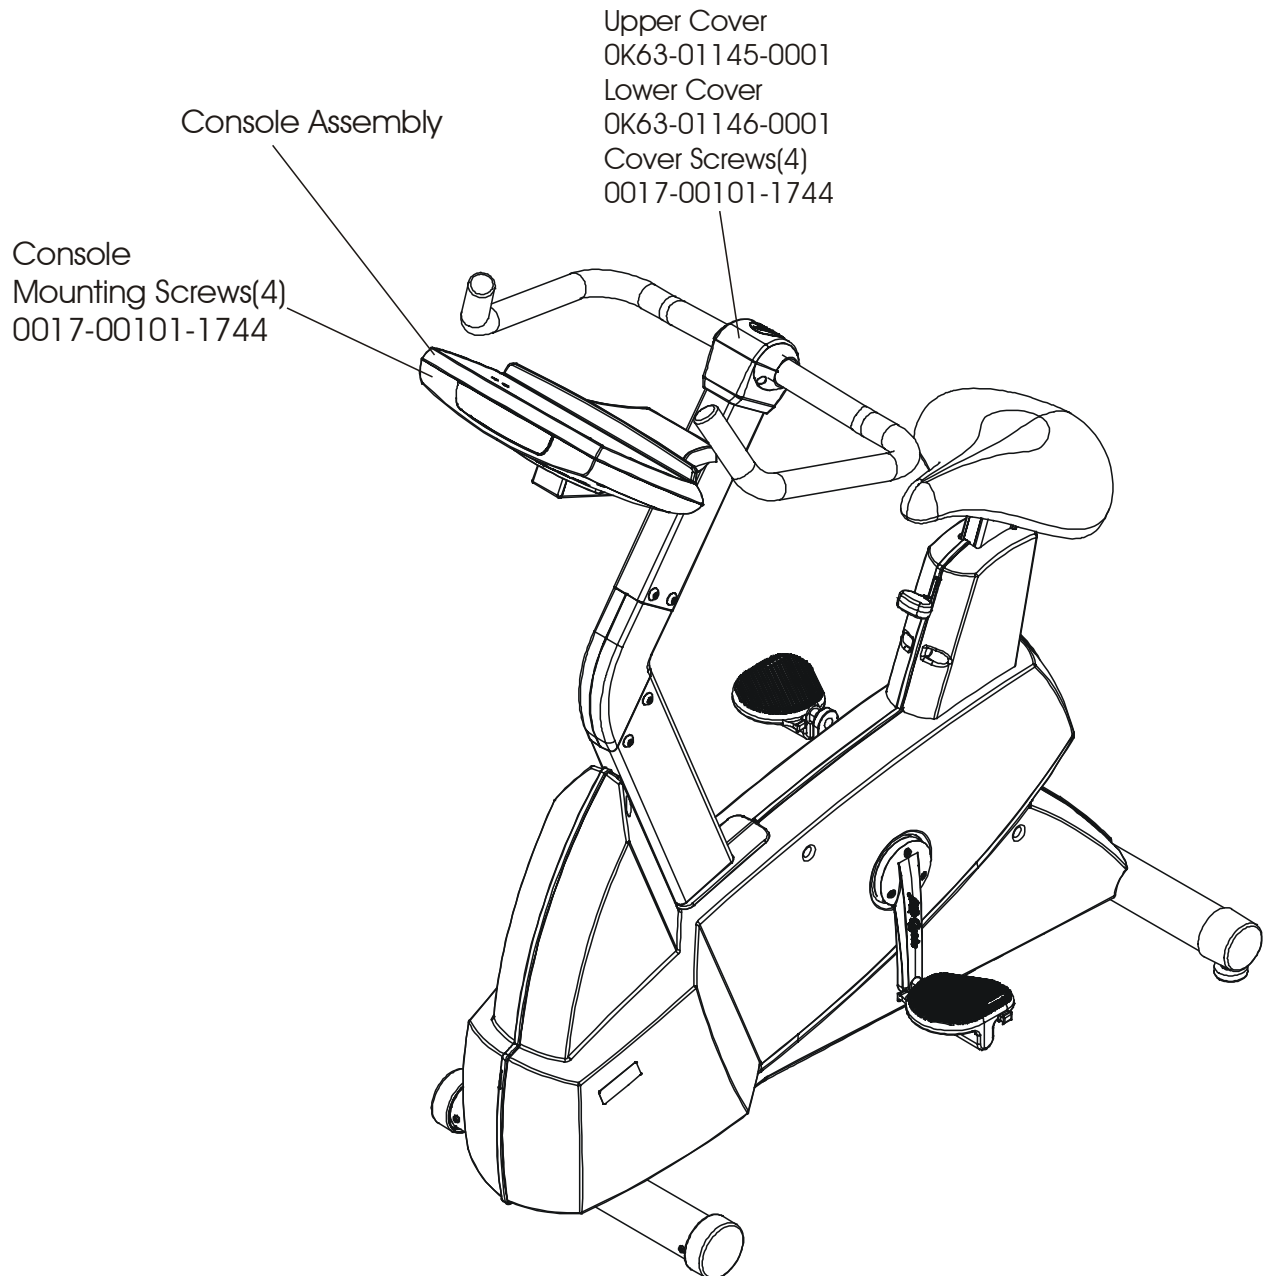


ARCTIC SILVER 90CW

Alternator w/Pulley - AK63-00093-0000


90CW-0XXX-02

S/N CCI100000 and UP

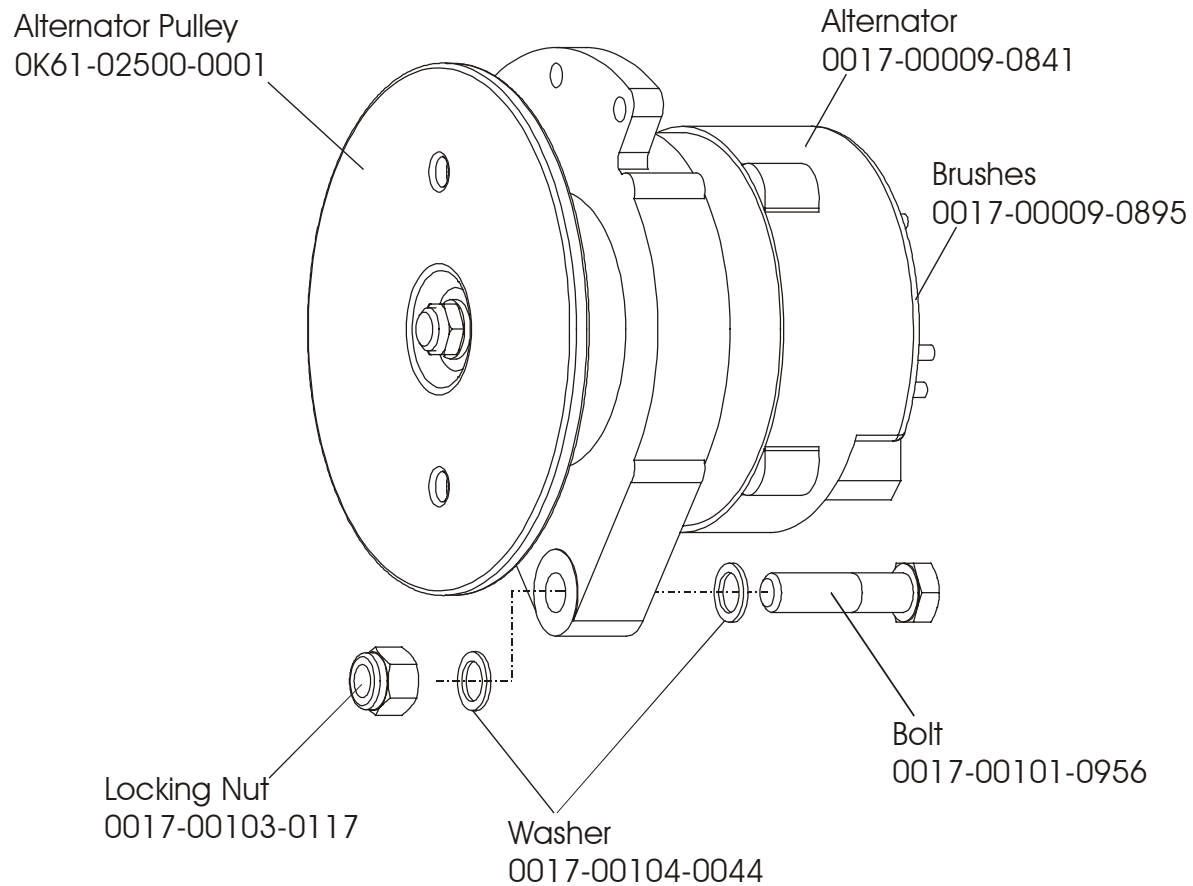


ARCTIC SILVER 90CW
Crankshaft and Bearing Assembly

90CW-0XXX-02
S/N CCI100000 and UP

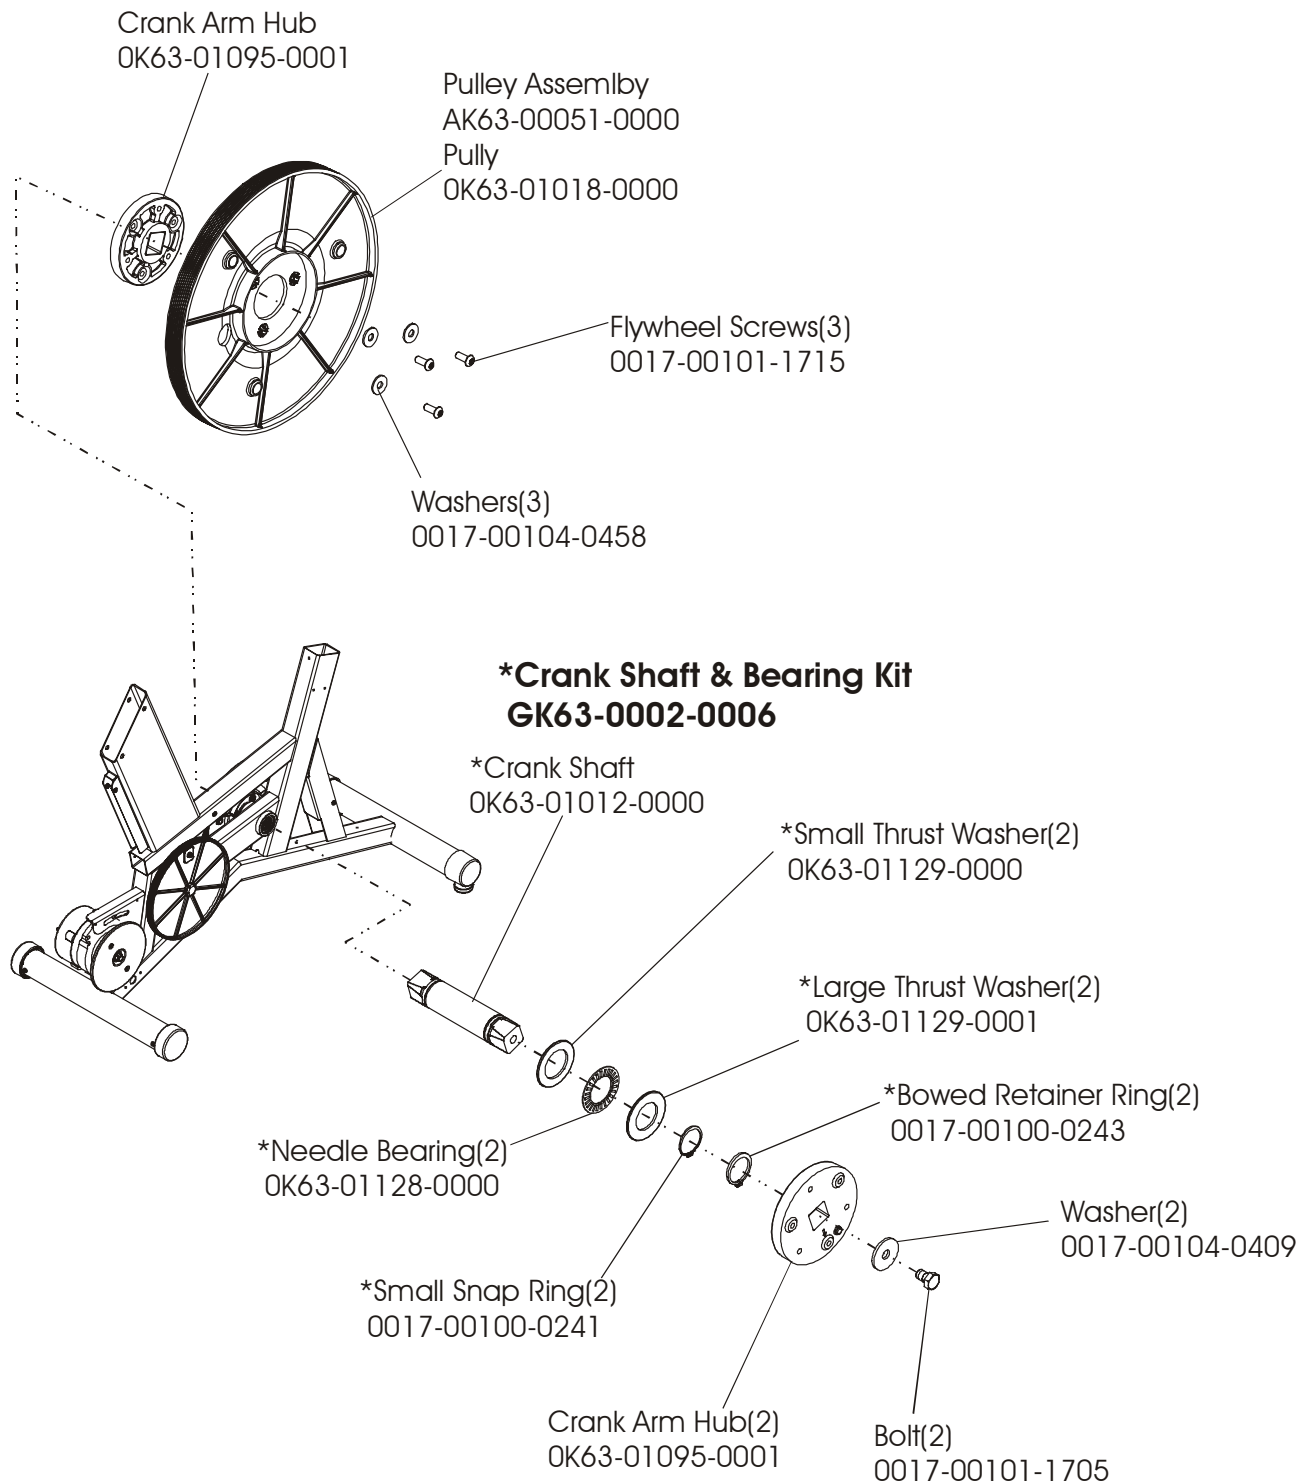

Kit Number – GK63-00002-0007

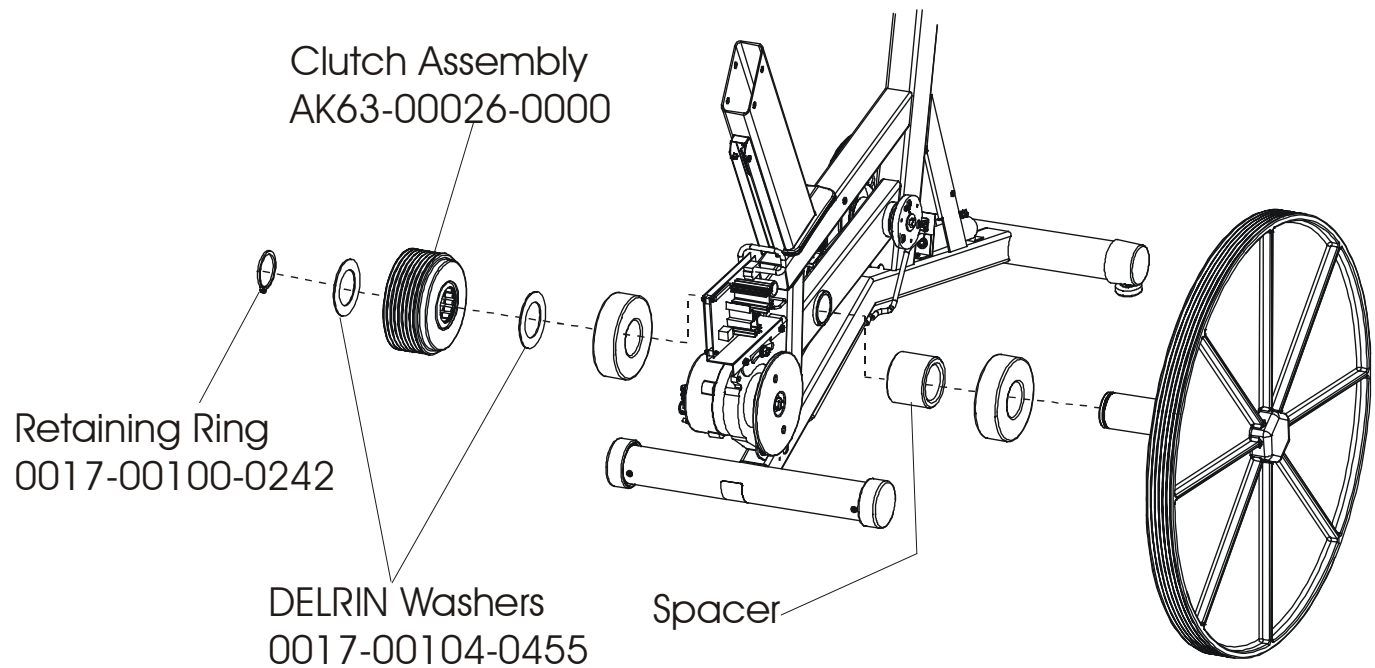


ARCTIC SILVER 90CW

Seat Latch Assembly - AK63-00043-0001

90CW-0XXX-02

S/N CCI100000 and UP

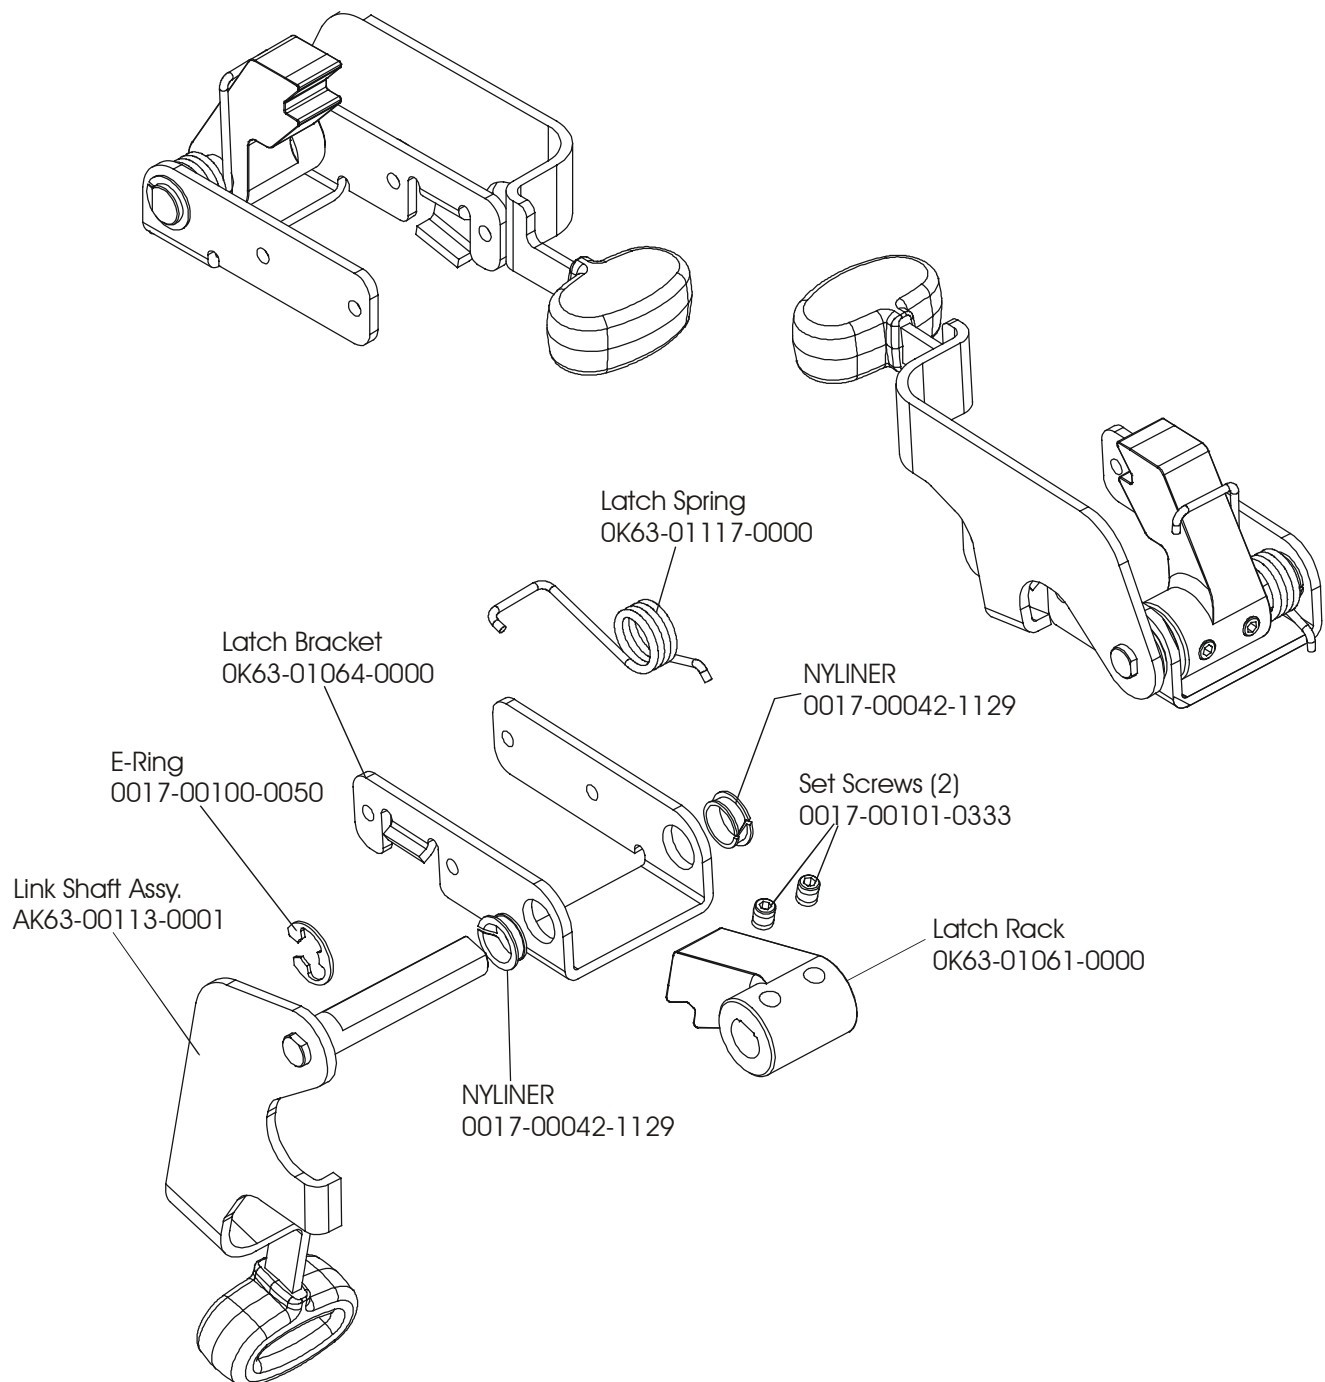




ARCTIC SILVER 90CW


Seat Post Assembly. – AK63-00232-0003

90CW-0XXX-02

S/N CCI100000 and UP

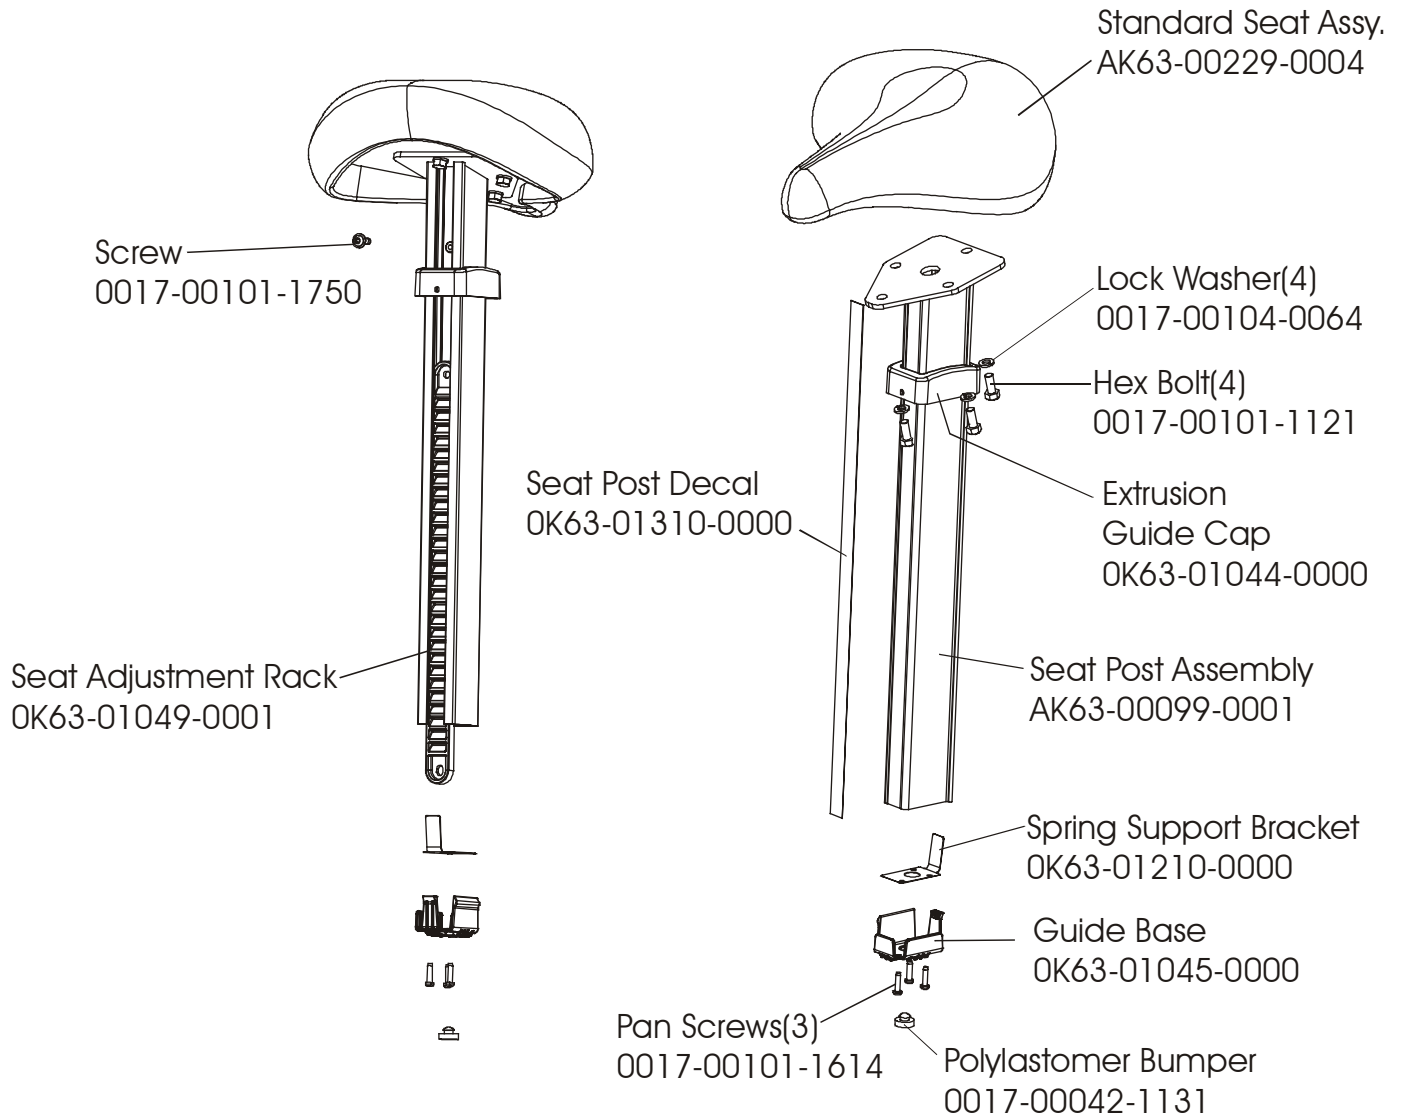


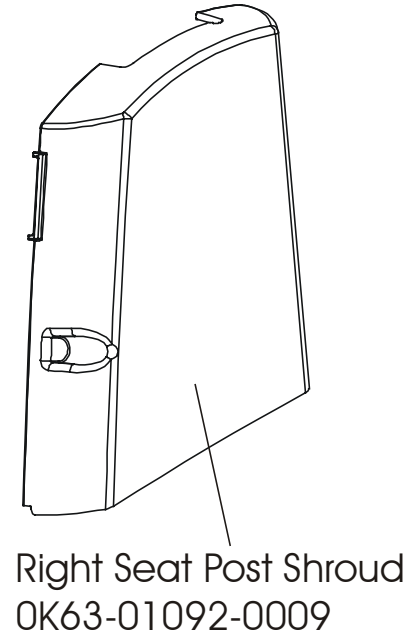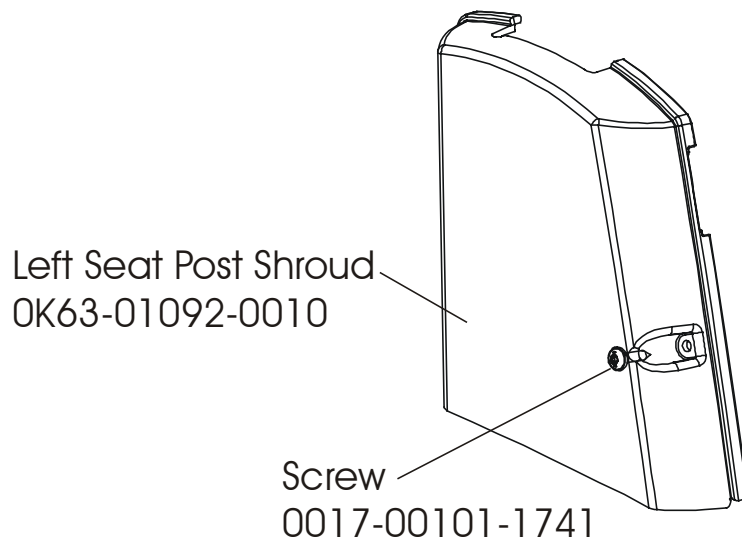

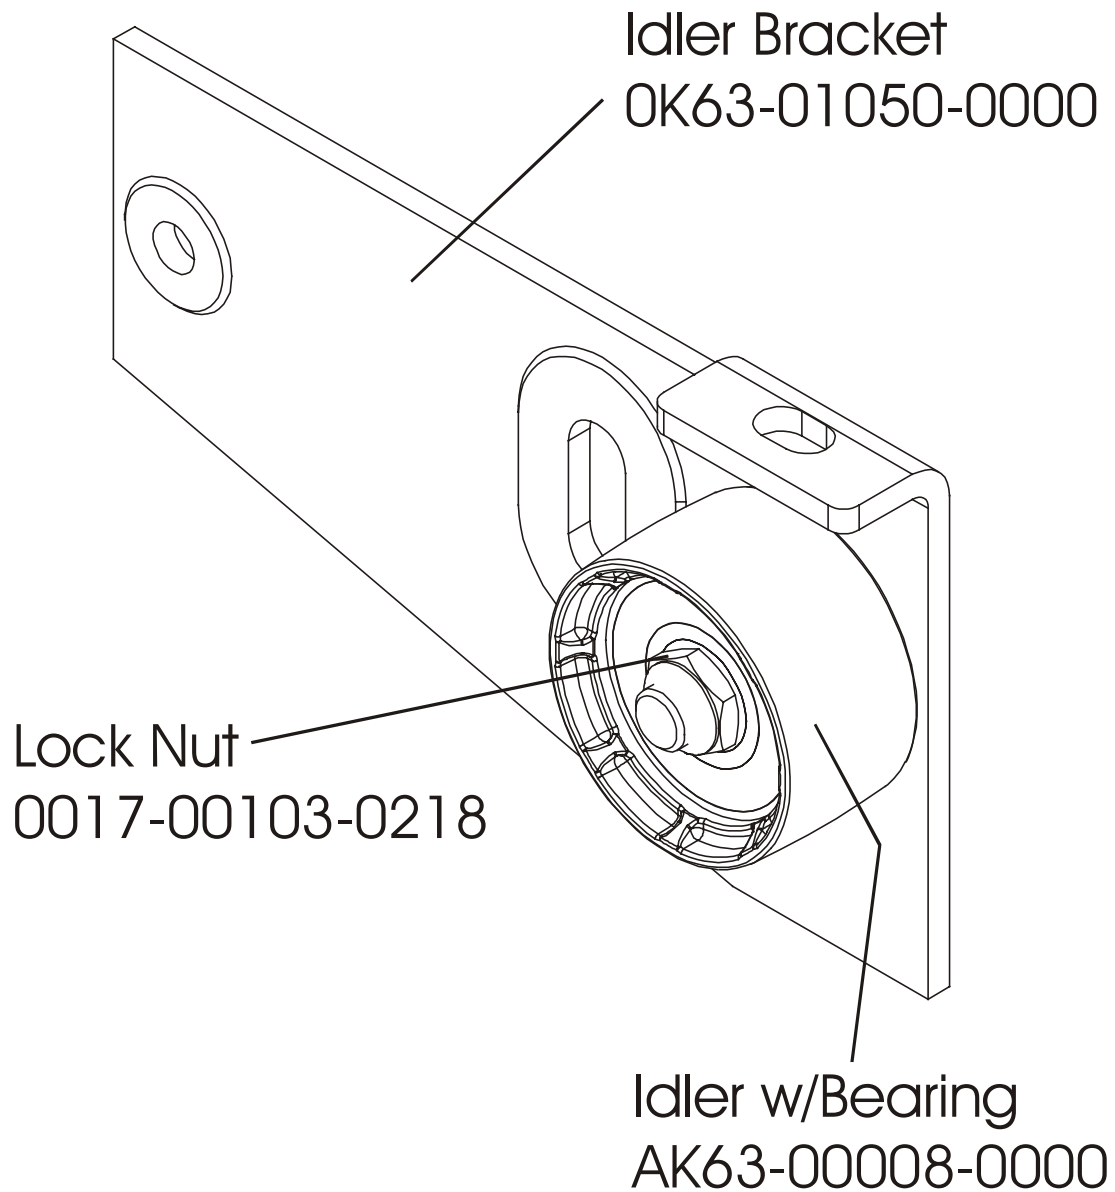


ARCTIC SILVER 90CW
Console Support Assembly

90CW-0XXX-02
S/N CCI100000 and UP

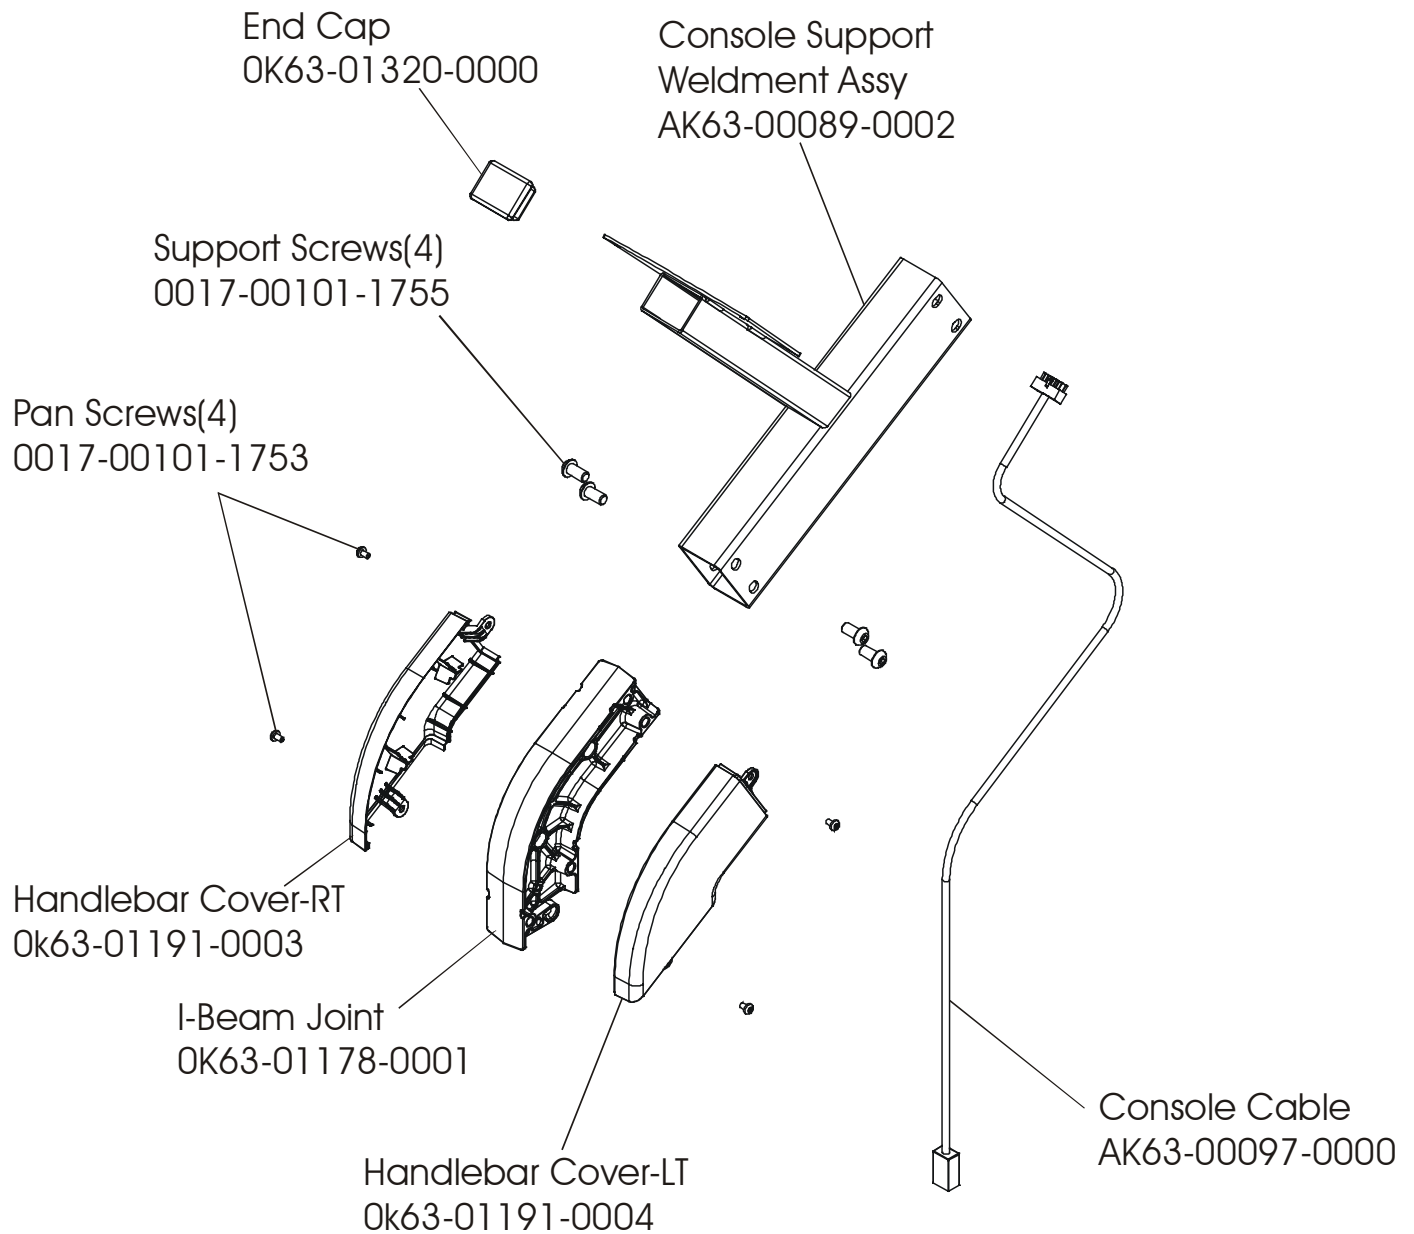

ARCTIC SILVER 90CW
Left Side Shroud and Crankarm

90CW-0XXX-02
S/N CCI100000 and UP

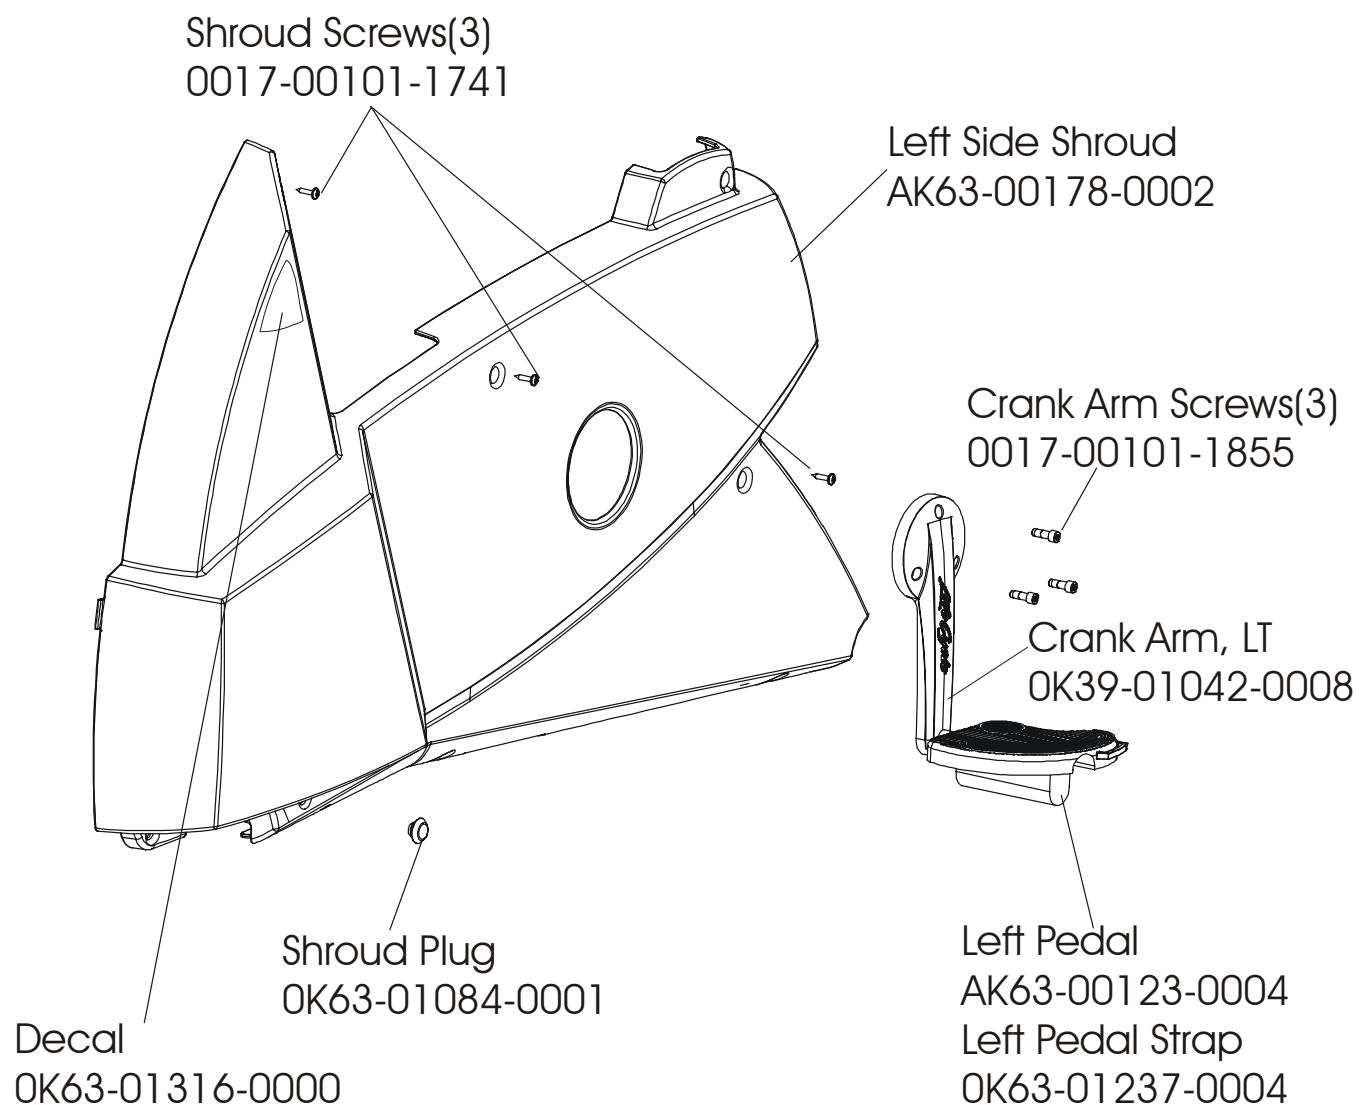


ARCTIC SILVER 90CW

Right Side Shroud and Crankarm


90CW-0XXX-02


S/N CCI100000 and UP

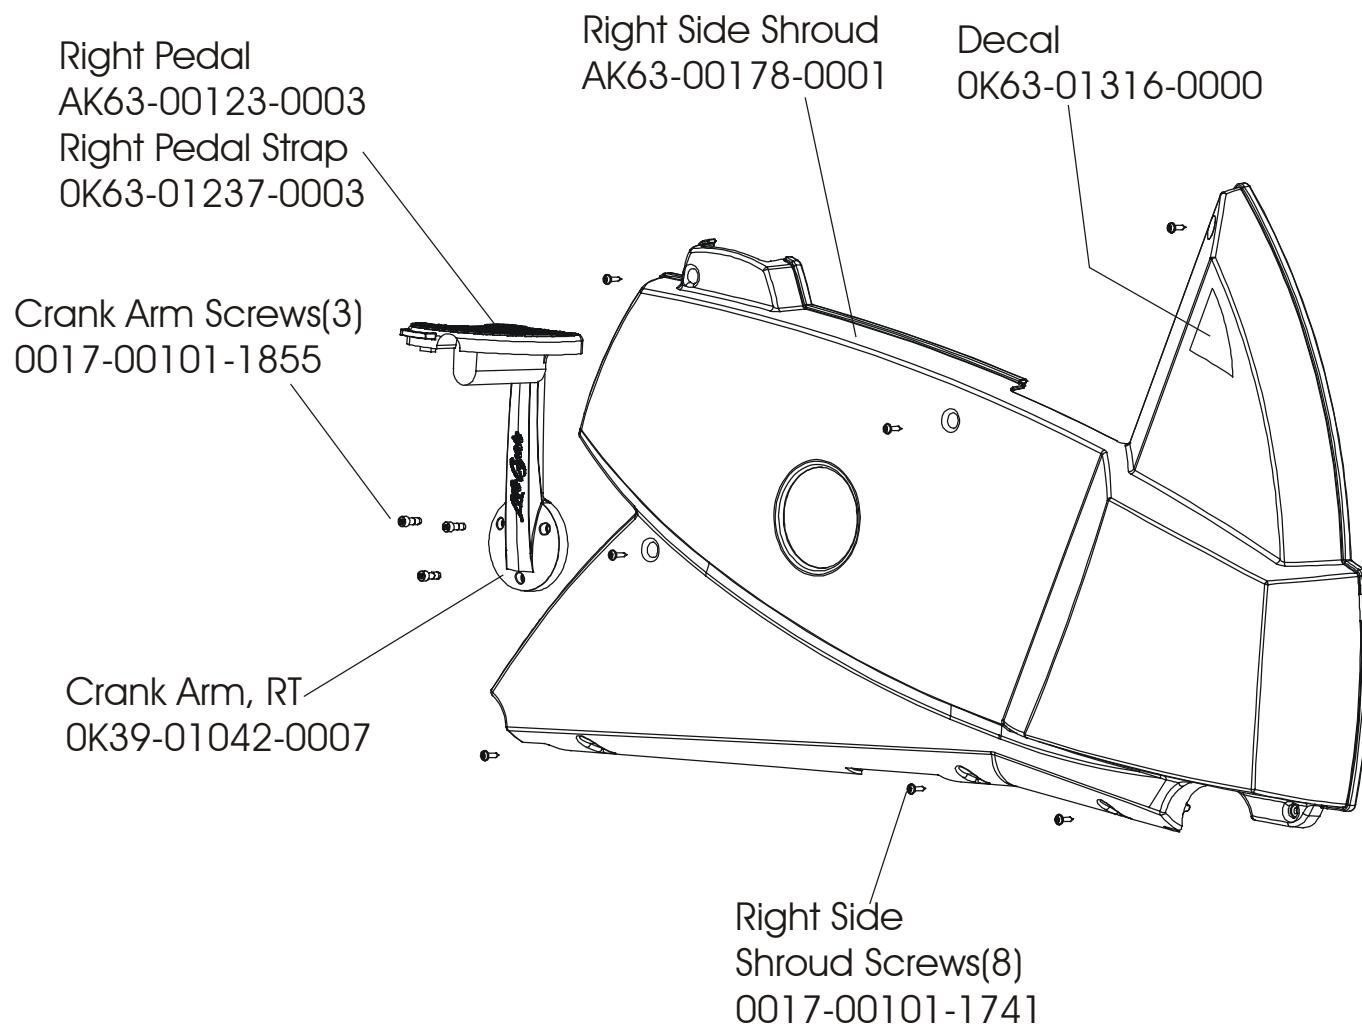

ARCTIC SILVER 90CW
PCB Mounting Bracket Assembly

90CW-0XXX-02
S/N CCI100000 and UP

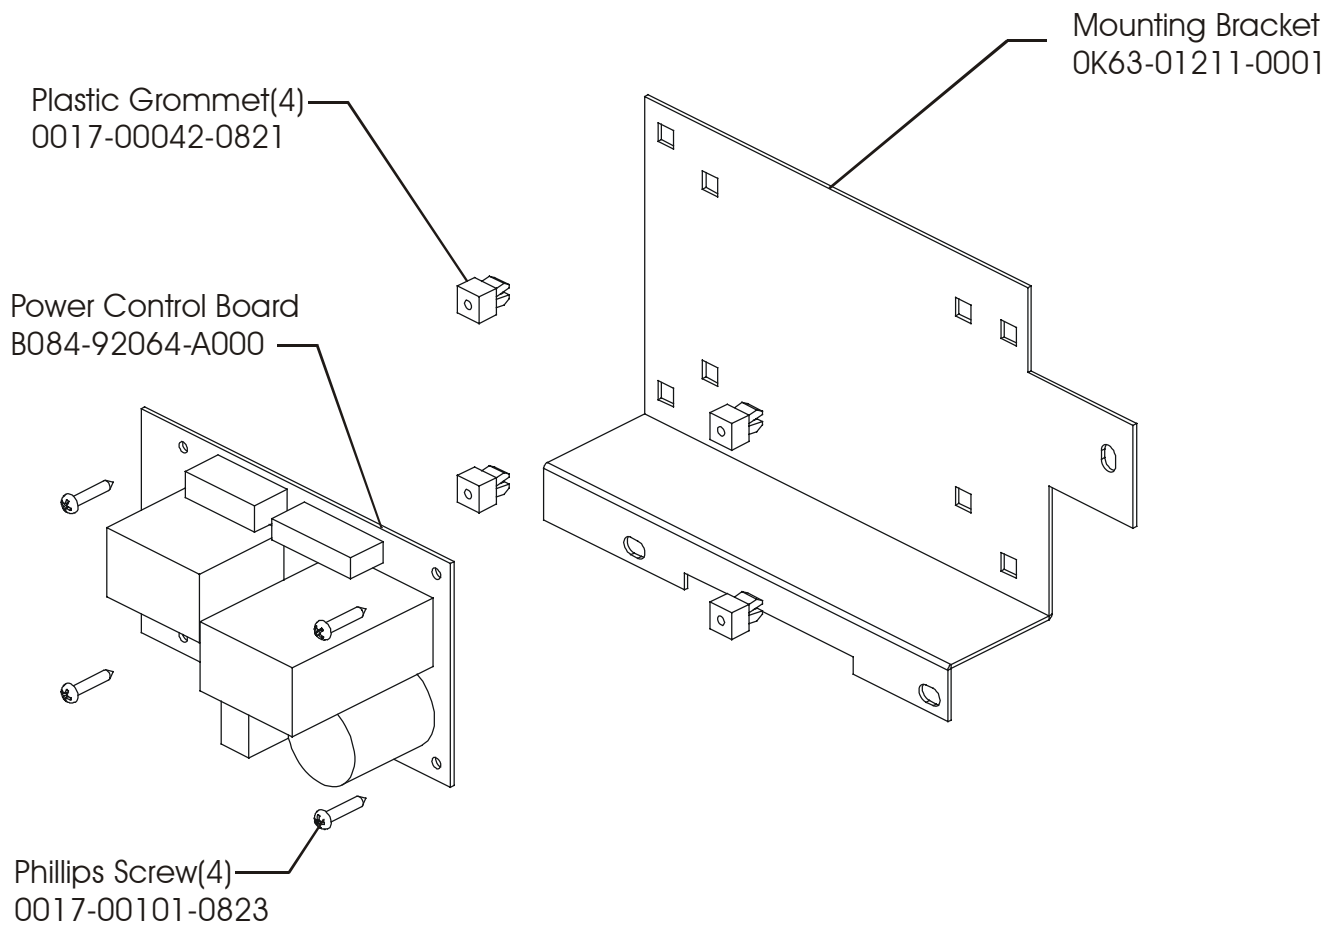

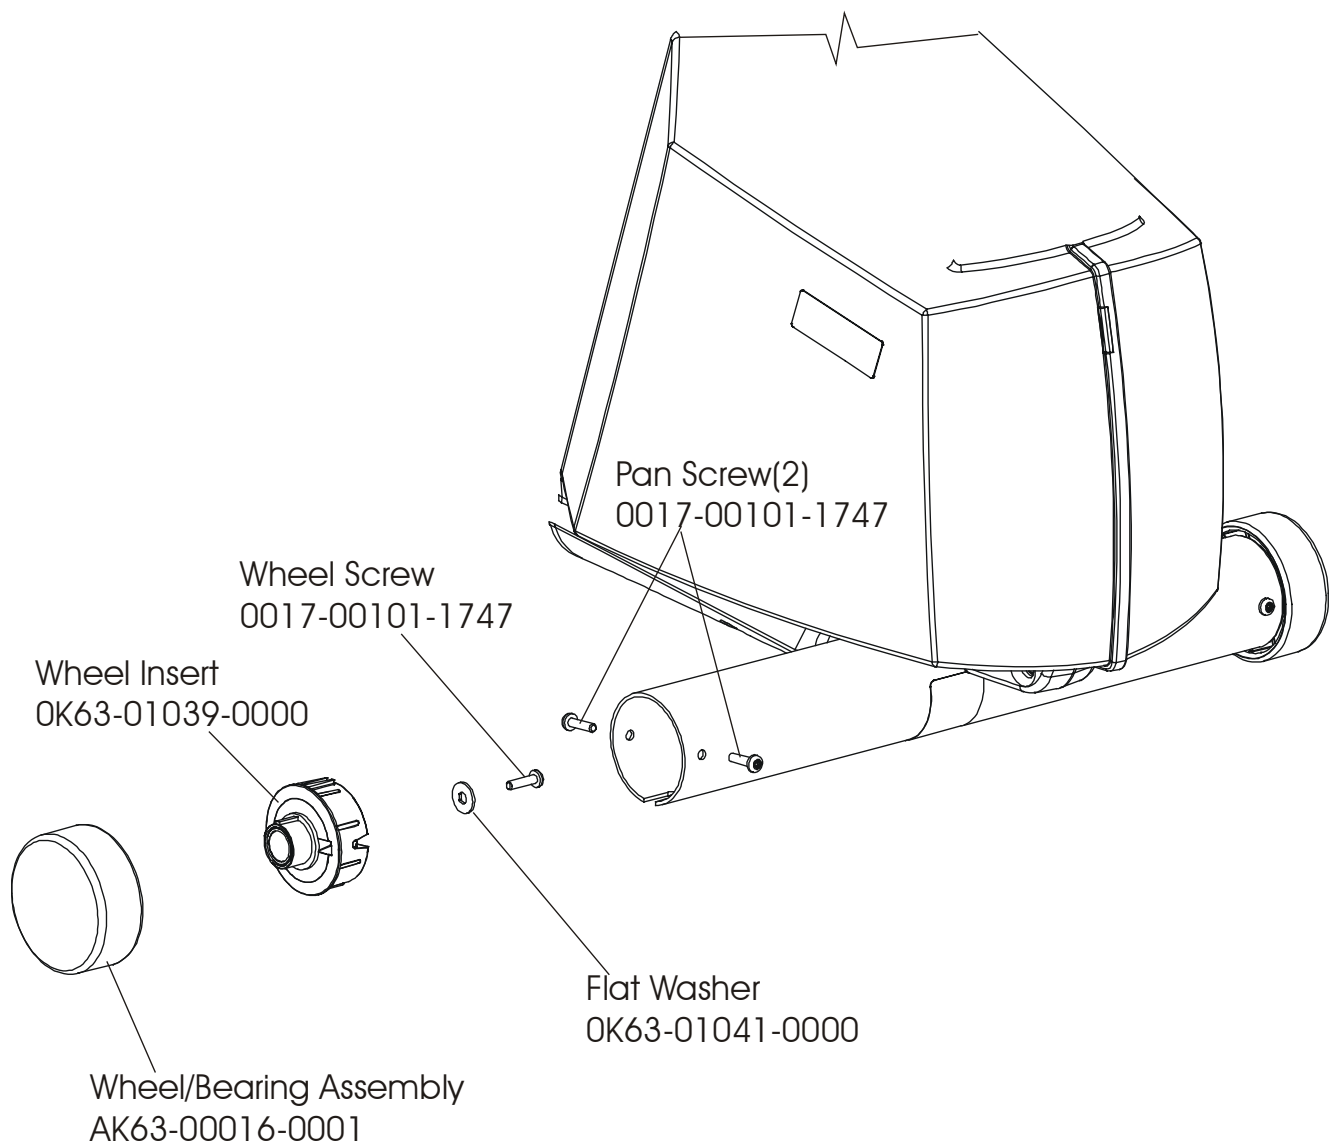


ARCTIC SILVER 90CW

Resistor Assembly – AK63-00114-0000

90CW-0XXX-02

S/N CCI100000 and UP

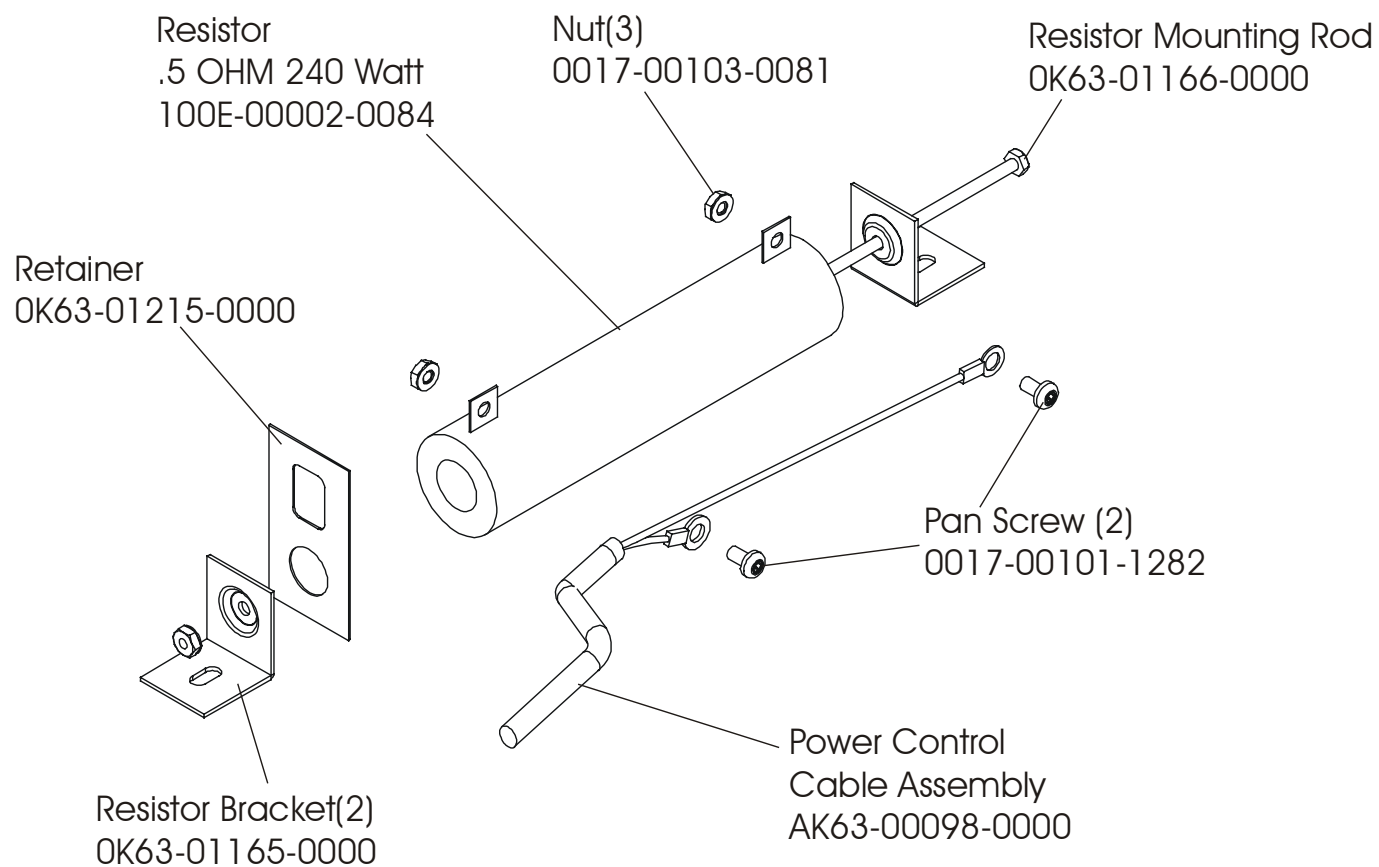



ARCTIC SILVER 90CW

Handlebar Assembly – AK63-00101-0001


90CW-0XXX-02

S/N CCI100000 and UP

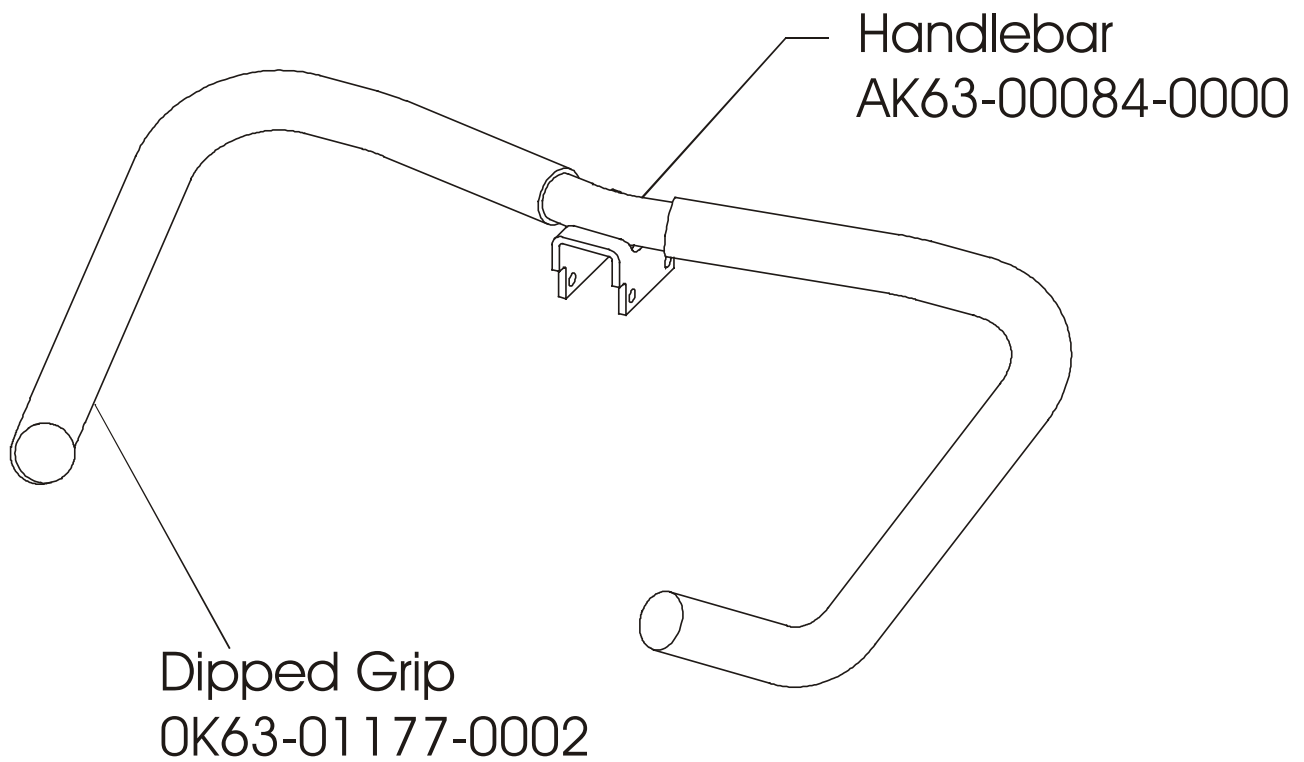

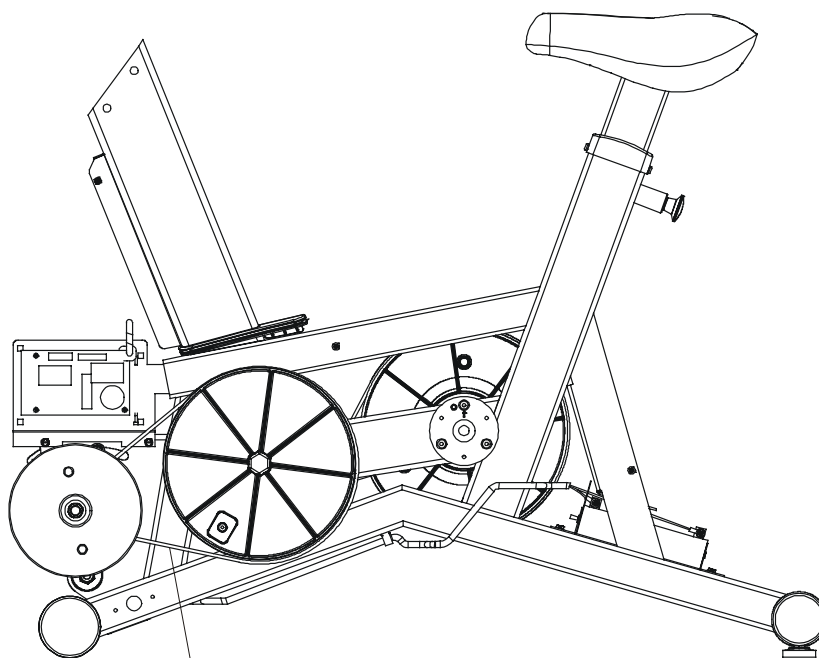

Alternator Belt
OK63-01065-0000

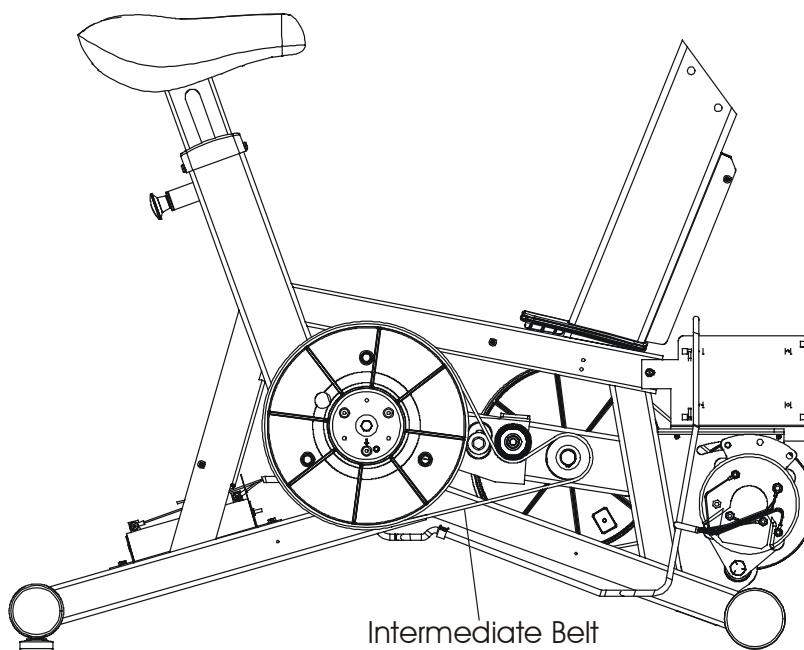

Intermediate Belt
OK63-01066-0001

ARCTIC SILVER 90CW

Cables

90CW-0XXX-02
S/N CCI100000 and UP

